 


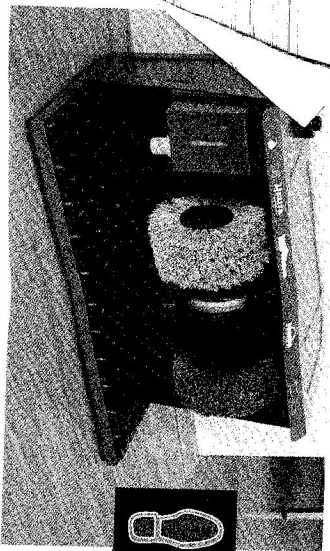


Heute
Maschinenfabrik

Instruction Manual

Description

 1. Metal Housing
2. Push-Pull Switch
3. Refill Bottle
4. Dispenser Cabinet
5. Side Brush (Left)
6. Pre-Cleaning Brush (Center)
7. Side Brush (Right)
8. Mat

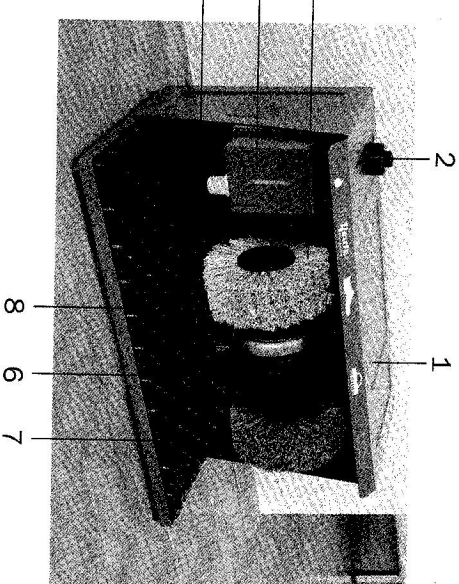

Schuhputzmaschine Shoe Polishing Machine

Easy Comfort


Art. Nr.: 21-130
Art. No.: 21-130

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed including the following:

- To protect against electrical shock do not immerse cord, plug, or machine into water or other liquid.
- This appliance is not for use by children.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Avoid touching moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, mechanical or electric adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer that might cause injuries.
- Only connect to the power outlet with proper voltage (230 V), which indicated on the rating label.
- Do not use outdoors and not expose to humidity or rain.
- To disconnect, press push button, then grip the plug and pull out from the wall outlet. Never pull on the cord.
- Do not use appliance for other than intended use.
- To avoid damaging the machine, do not place other object on top of the unit.

120W
230V~50HZ

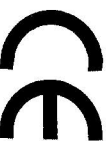

Note:


This model is a household shoe polishing machine and works with an intermittent duty motor. The duty cycle of the motor is designed to run for maximum 10 minutes continuously and then 5 minutes off before restarting again. The polisher motor has an automatic overload thermal cut-out which stops the appliance in case of excessive force then make it over-heating. If the overload cut-out is tripped, you must wait approximately 10-15 minutes before beginning regular operation again. (depending on the room temperature)

How to use your shoe polishing machine

1. Push the **on/off** button to top to start the machine. **This button is push once on, push one more time will be off.**
2. Use the pre-cleaning brush (center) for a few seconds to remove mud and dust on the shoe. The dirt that has been brushed off is collected in the rubber honeycomb located under the brushes. The mat is removed and can be emptied easily.
3. To apply Polishing Cream to your shoes gently press the shoe against the sphere which is placed on the bottom of the cream-bottle (Fig. 1).
4. For best result, apply the shoe polish cream most suitable to the shoe. Wait until perfectly dry then polish with one of side brush (left or right). **Do not mixing use the side brushes with color shoe cream, that will affected the result of polishing.**
5. When polishing is completed, push the on/off button once again to switch the power off.

Refilling the shoe polish cream

- Through the slot of dispenser holder can see the shoe cream is used up or not.
- Press the latch on the side of the dispenser, move outward that can open the dispenser holder.
- Take out the empty cream bottle, loose the CAP to put the spring and sphere out. Close the exhaust pin by push down. Fill the shoe cream into the bottle (make sure to refill same type of cream in the next time).
- After finish to fill the shoe cream, put the spring and sphere back and turn the cap tightly (Fig. 1).
- Open the exhaust pin by pull up. Put the cream bottle into the dispenser holder and pressing down the latch to pull back the dispenser in position.

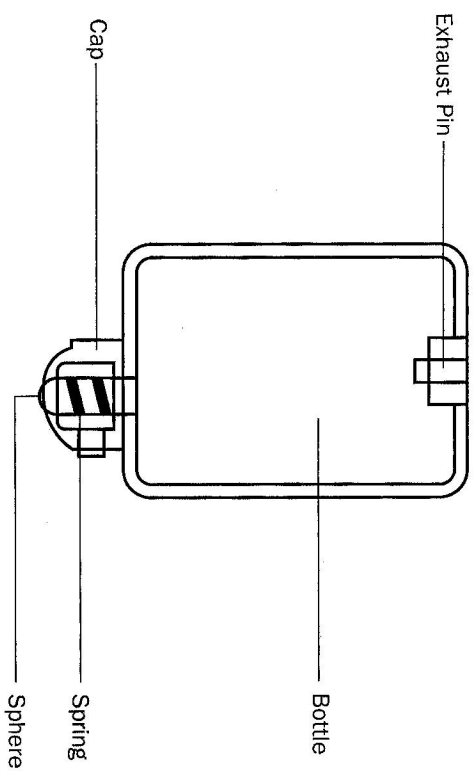

Cleaning and Maintenance

1. Unplug the unit before cleaning and maintenance.
2. You may clean up the dust and mud on the mat by vacuum cleaner, or you may take the whole mat out to clean the mud and dust left on it. Always keep the mat dry before putting it back to the machine.
3. Fitting and changing the brush
When changing brush is necessary, unscrew the fixing screw on the brush and take away the brush going to be replaced on the machine.
 - a) Side Brushes (left and right)
 - turning screw anti-clockwise with screwdriver.
 - replace the brush unit by inserting it accurately in the d-out driver shaft.
 - b) Pre-cleaning Brush (center)
 - Before change the center brush, you must take the right hand side brush firstly.
 - turning screw anti-clockwise with screwdriver.
 - replace the brush unit inserting it carefully because center brush is tight fit.
 - use screwdriver turn screw clockwise to lock it firmly.
 - make sure the brush is perfectly tight by pulling it out by hand, re-fix again if it is found loosen.