


NATURE

**TOUCHLESS
SOAP
DISPENSER**

INSTRUCTIONS MANUAL

ISSA
For: Washbasin / Lavatory / Bathroom / Home / Office

CE

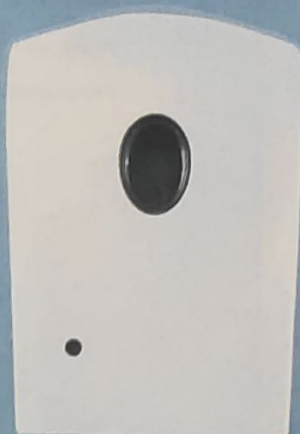



(Figure 1)



(Figure 2)

MOUNTAIN

Insert the metallic key supplied in the mounting kit and turn it to the right or to the left to open the front cover of the dispenser, and the cover will open (Figure 1).

Mount the dispenser on the wall using the screws and dowels supplied in the mounting kit.

Mount the dispenser at least 30cm above the surface of the washbasin.

OPERATION

The dispenser operates with 4 AA size batteries.

ONLY USE ALKALINE BATTERIES.

Place the batteries in the battery compartment in the front side of the inner mechanism (Figure 2).

Once you have mounted the device on the wall and opened the front cover, place the foam/soap cartridge (bag) in the cartridge housing located in the dispenser with its pumping side looking downwards (Figure 3).

Fit the pump on the foam/soap cartridge (bag) into the pump slot in the mechanism of the dispenser (Figure 4).

Once you have placed the cartridge into the cartridge housing and the pump on the cartridge into the pump slot, close front cover and the dispenser will be ready for service.

WARNING FOR FILLABLE VERSION

Do not overfill above the maximum filling level and avoid liquid contact to the electronic unit.

Pouring liquid over the electronic unit will invalidate the warranty.

Do not wash the tank together with the pump (Figure 5).

Unscrew pump (Figure 6).

Wash the tank alone.

Note that inner part of blue housing must be dried before screwing the pump back (Figure 7).

BATTERY REPLACEMENT

Red Led will blink and the dispenser will stop servicing when the batteries are low.

Time for new battery set.

Remove the battery compartment in the front side of the inner mechanism by pressing the lugs (Figure 2).


Place new fresh alkaline batteries. (AA size)
Re-fit the battery compartment into its place and slide it forward and make sure that the lugs have engaged in their slots.

WARNING! Do not attempt to service or fix the device yourself at any time. Such attempts will invalidate the warranty.


Purchase date:

Invoice no:

Company stamp:

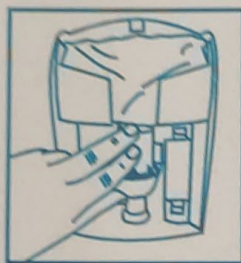

(Figure 3)

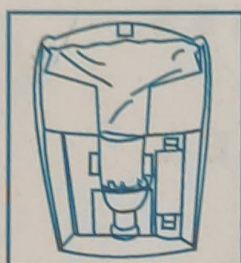


(Figure 4)


Maximum Filling Level



(Figure 5)

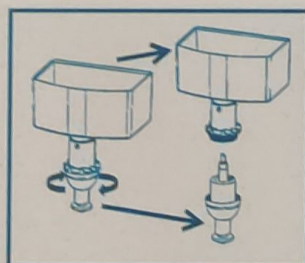

(Figure 6)

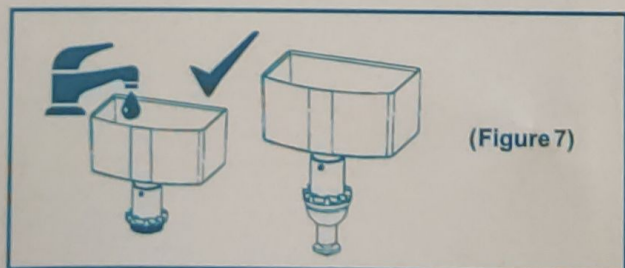

(Figure 7)